Shiggles, Inc.
P.O. Box 771378
Miami, FL 33177 U.S.A.
Phone: (305) 251-2637
www.Shiggles.com

VR68 (MA) Strip Poker 092805-v2

SHIGGLES INC.

User's Guide for Club Jenna presents Jenna Jameson's Plug & Play Strip Poker

Model No. VR68

Congratulations on your purchase of Shiggles' Jenna Jameson's Plug & Play Strip Poker. Enjoy every male's fantasy—take Jenna Jameson home and strip her slowly while she teases you with comments that have under-the-cover meanings. Play your cards right and she'll bare it all in three different strip sequences—Big Slick, Inside Straight, and All In! You'll find that card play is foreplay to Jenna, and as the competition gets stiff, she gives you her famous Heartbreaker moans and groans. But watch out, Jenna's no pushover—at cards, anyway.

Just plug Jenna Jameson Plug & Play Strip Poker into your TV and play! No other equipment is needed.

Jenna Jameson's Plug & Play Strip Poker is easy to use, but be sure to use it safely. Before starting, please read this manual thoroughly, especially noting safety, care and battery information. Keep this manual for reference.

This package includes one Jenna Jameson Plug & Play Strip Poker and its user's guide.

Contains material used with permission from Club Jenna, Inc. © 2005. All rights reserved.

FOR ADULTS ONLY!

Phone: 305-251-2637

Table of Contents

Installing Batteries. . . . . page 3
Function of Buttons . . . . . page 5
How to Use. . . . . page 6
Getting Started. . . . . page 6
Home Menu. . . . . page 6
On-Screen Icons. . . . . page 6
How to Play 5-Card Draw Poker . . . . . page 7
Ranking of Hands. . . . . page 7
Battery Information . . . . . page 9
Special Care & Handling . . . . . page 9
FCC Warning. . . . . page 10
90-Day Limited Warranty. . . . . page 11

Installing the Batteries

Your Jenna Jameson Plug & Play Strip Poker requires three AA batteries, not included. To replace the batteries, carefully turn the unit over so that the top side is face-down on a soft surface, such as a towel or magazine. You'll find the battery compartment on the unit's back.

Use a small Phillips screwdriver to remove the screw. Lift off the battery compartment lid. Install three AA batteries, making sure to match the polarity (+ and -) with the diagram inside the battery compartment. Place the battery compartment lid back on. Replace the screw and tighten it carefully.

Layout of Jenna Jameson's Plug n' Play Strip Poker

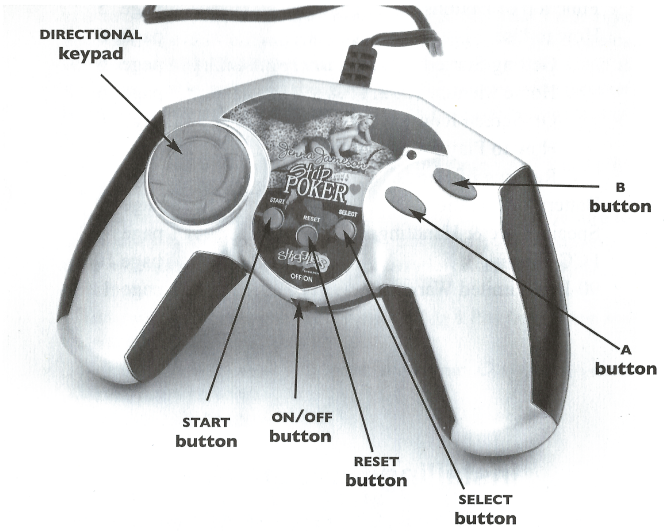

Functions of Buttons

ON/OFF: Move switch to turn your unit on or off.

SELECT: Press to select which strip sequence you wish to play or press to select the **NEW GAME** icon during your game.

START: Press to start your game after selecting the strip sequence. After you've won a sequence, press to stop the show and jump to the **NEW SERIES** icon.

DIRECTIONAL KEYPAD: Press the directional keypad to move the cursor left, right, up or down.

A: Press to confirm the selected on-screen icon, to select the card you want to discard or to un-select a selected card.

B: Press to hear Jenna anytime throughout the game or press to un-select a selected card.

RESET: Press to reset your unit if it malfunctions or after you've inserted new batteries.

Jenna Jameson's Plug n' Play Strip Poker may lock up due to static discharge or other electrical disturbances. If this should happen, press the RESET button on the front of the unit.

How to Use

GETTING STARTED

Insert three AA batteries into your controller. Then use the AV cable to connect your controller to your television.

Turn the controller on.

You will see the Shiggles logo, then Jenna Jameson, and then the home menu.

After a minute passes and you've have not started a new game, your game is enter the demo mode. Jenna will play a round of strip poker with an imaginary player, but she will not lose enough money to strip. The game will not go into demo mode while playing an existing game.

HOME MENU

There are three different strip series to choose from: Big Slick, Inside Straight and All In. Press the **SELECT** button to choose the series you wish to play and press the **START** button to begin.

ON-SCREEN ICONS

Use the directional keypad to move the cursor over the different on-screen icons. Then press the A button to confirm the on-screen icon.

$50: Select to bet or to raise **$50**.

$150: Select to bet or to raise **$150**.

$250: Select to bet or to raise **$250**.

CHECK: Select to if there are no bets on the table and you don't want to bet or fold. This will pass the bet to the next player.

CALL: Select to match the bet on the table. After the first betting round, you will proceed to the discard.

FOLD: Select to forfeit the hand. You will lose all bets and the ante played in the hand.

DISCARD: Select to discard the cards you have turned face down and receive new cards.

NEW GAME: Select to start a new game with the same series.

NEW SERIES: Select to start a new game with a different series. This icon will take you back to the Home Menu so you can choose a different series. The **NEW SERIES** icon will appear only when you've won a series or you've lost a game.

STRIPSHOW: Select this icon to view a slide show of Jenna stripping. This icon will only appear when you've beaten a particular series.

Ranking of Hands

1. *Royal Flush:* Ten, Jack, Queen, King, Ace of the same suit.
2. *Straight Flush:* Straight (see #6 below) with all five cards in the same suit.
3. *Four of a Kind:* Four cards of the same rank.
4. *Full House:* Three of a kind plus a pair.
5. *Flush:* Five cards of the same suit. If there is more than one flush, the hand with the highest card(s) wins.
6. *Straight:* Five cards in sequence. Cards can be in any suit. An Ace can be used in the highest straight (10, J, Q, K, A) and the lowest straight (A, 2, 3, 4, 5).
7. *Three of a Kind:* Three cards of the same rank.
8. *Two Pair:* Two cards of the same rank plus two other cards of a different rank.
9. *One Pair:* Two cards of the same rank.
10. *High Card(s):* The highest card or cards.

HOW TO PLAY 5-CARD DRAW POKER

Jenna likes to strip to 5-Card Draw Poker. Both of you will start with a $4,000 bank. Every time you start a new game or new series, your banks will be replenished with $4,000.

There are two betting rounds per hand. At the beginning of the first betting round, both of you will automatically place an ante of $50 into the Pot. Five cards will be dealt to each player. Your cards will be face-up on the screen and Jenna's cards will be face-down on the screen.

Jenna will start. The box on the screen will say what she is doing. She may bet, check or fold. Depending on Jenna's action, you can **CHECK, BET, CALL, RAISE** or **FOLD**. Use the **DIRECTIONAL KEYPAD** to move the cursor over the on-screen icons. Press **A** to confirm your selection. If you raise, Jenna may re-raise or fold. The first betting round will continue until both of your bets are even.

If both players **CHECK**, the current hand will end and the pot (both players' antes) will be carried over to the next hand.

After the first betting round, you can choose to discard some of your cards. Press the **DIRECTIONAL KEYPAD** to move the cursor over the cards you wish to discard. Press the A button to confirm your selection. You can select up to five cards. The selected card will turn face-down. To unselect a selected card, move the cursor over the card and press either the A button or the B button to unselect. When you have finished selecting all of the cards you want to discard, move the cursor over the **DISCARD** icon and press **A** to confirm. Your cards will be replaced.

The box on the screen will say how many cards Jenna is discarding.

After discarding, the second betting round will begin. Jenna will act first. After her move, you can **CHECK, BET, CALL, RAISE** or **FOLD**. The betting will continue until both of your bets are equal.

It's time for the showdown! Jenna will flip her cards over and the box on the screen will announce the winner.

For every $1,000 she loses, Jenna's image will switch to a more revealing image. If she wins her $1,000 back, the previous Jenna image will appear.

Once Jenna goes bust—loses all of her money—you can press the A button to see a strip show of all of her images in that series. After you've won a series, that series will be marked by Jenna's infamous Heartbreaker tattoo.

Special Care & Handling

- Avoid rough handling such as bumping or dropping.
- Avoid moisture and extreme temperatures. For best results, use between the temperatures of 39° F and 100° F (4° C and 38° C).
- Clean using only a slightly damp cloth. Do not use cleaners with chemical agents.

Battery Information

- Your Jenna Jameson's Plug n' Play Strip Poker uses three AA batteries, not included.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Do not use rechargeable batteries.
- Remove exhausted batteries from the unit.
- Do not short-circuit battery terminals.
- Remove batteries and store them in a cool, dry place when not in use.
- To avoid explosion or leakage, do not dispose of batteries in a fire or attempt to recharge alkaline or other non-rechargeable batteries.

Due to continuing improvements, actual product may differ slightly from the product described herein.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- *Reorient or relocate the receiving antenna.*
- *Increase the separation between the equipment and receiver.*
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- *Consult the dealer or an experienced radio/TV technician for help.*

90-Day Limited Warranty

SHIGGLES, INC., warrants to the original consumer that its products are free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, SHIGGLES, INC., will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to the factory address show at right.

The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, neglect, wear and tear, inadequate maintenance, commercial use, or unreasonable use of the unit. Removal of the top panel voids all warranties. This warranty does not cover cost of repairs made or attempted outside of the factory.

Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply.

The only authorized service center in the United States is:

Shiggles, Inc.
P.O. Box 771378
Miami, FL 33177 U.S.A.
Phone: (305) 251-2637
www.Shiggles.com

Ship the unit carefully packed, preferably in the original carton, and send it prepaid, and adequately insured. Include a letter, detailing the complaint and including your daytime telephone number, inside the shipping carton.

If your warranty had expired and you want an estimated fee for service, write to the above address, specifying the model and the problem.

PLEASE DO NOT SEND YOUR UNIT WITHOUT RECEIVING AN ESTIMATE FOR SERVICING. WE CANNOT STORE YOUR UNIT!